 


# How to use Wonderbook

---

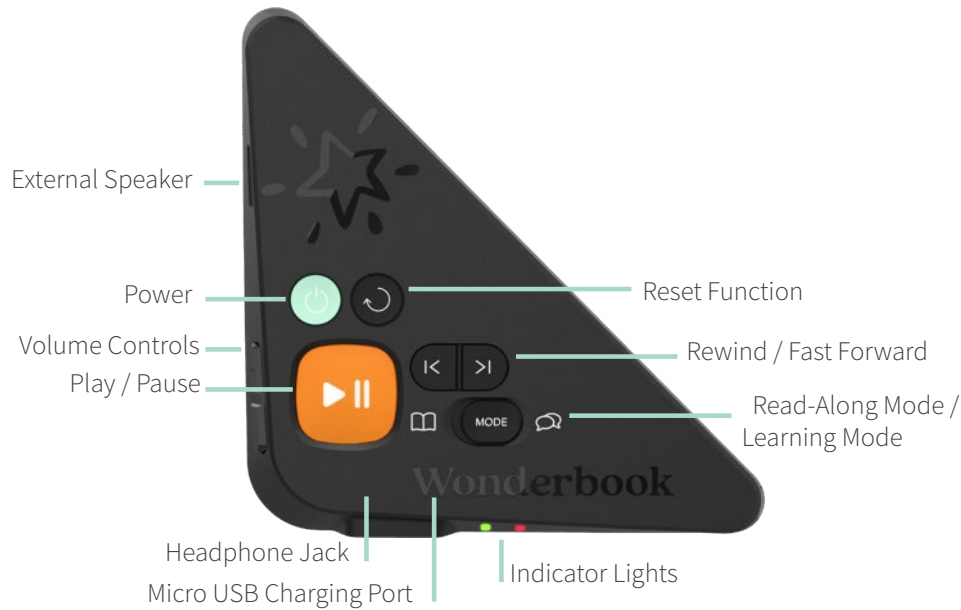


The battery life of a Wonderbook with a full charge is 14 to 16 hours.

Picture Books and Leveled Readers average 85 to 95 plays before needing to be charged.

■ A flashing red light indicates a low battery and one hour or less of play time left.

---

Press  to turn on or off.

Press  to start at the beginning of the book.

Adjust volume on the side.

Enjoy out loud or plug in headphones.

---

■ Solid green light = charged and ready to play

■ Flashing light = in pause mode

Once paused, the device will automatically turn off after four minutes of inactivity.

Not turning on? Use a micro USB cord to charge or return this Wonderbook to your local library.

---

Slide between   and   to experience Wonderbook in two different ways.

## Read-Along Mode

Use  to start and stop the audiobook.

Press  to move forward a track or press  to go back.

## Learning Mode

Use  to move to the next question.

---

For more information on Wonderbook, visit [morewonderbook.com](http://morewonderbook.com)

Findaway, 31999 Aurora Road, Solon OH, 44139, USA